

Linkage Installation

IMPORTANT

The lack of clearance between the top left side (driver's side) of the shifter stick and the floor tunnel may require enlargement of the opening to allow shifting into REVERSE gear. Check this after you have installed shifter; and cut just enough metal away to clear stick.

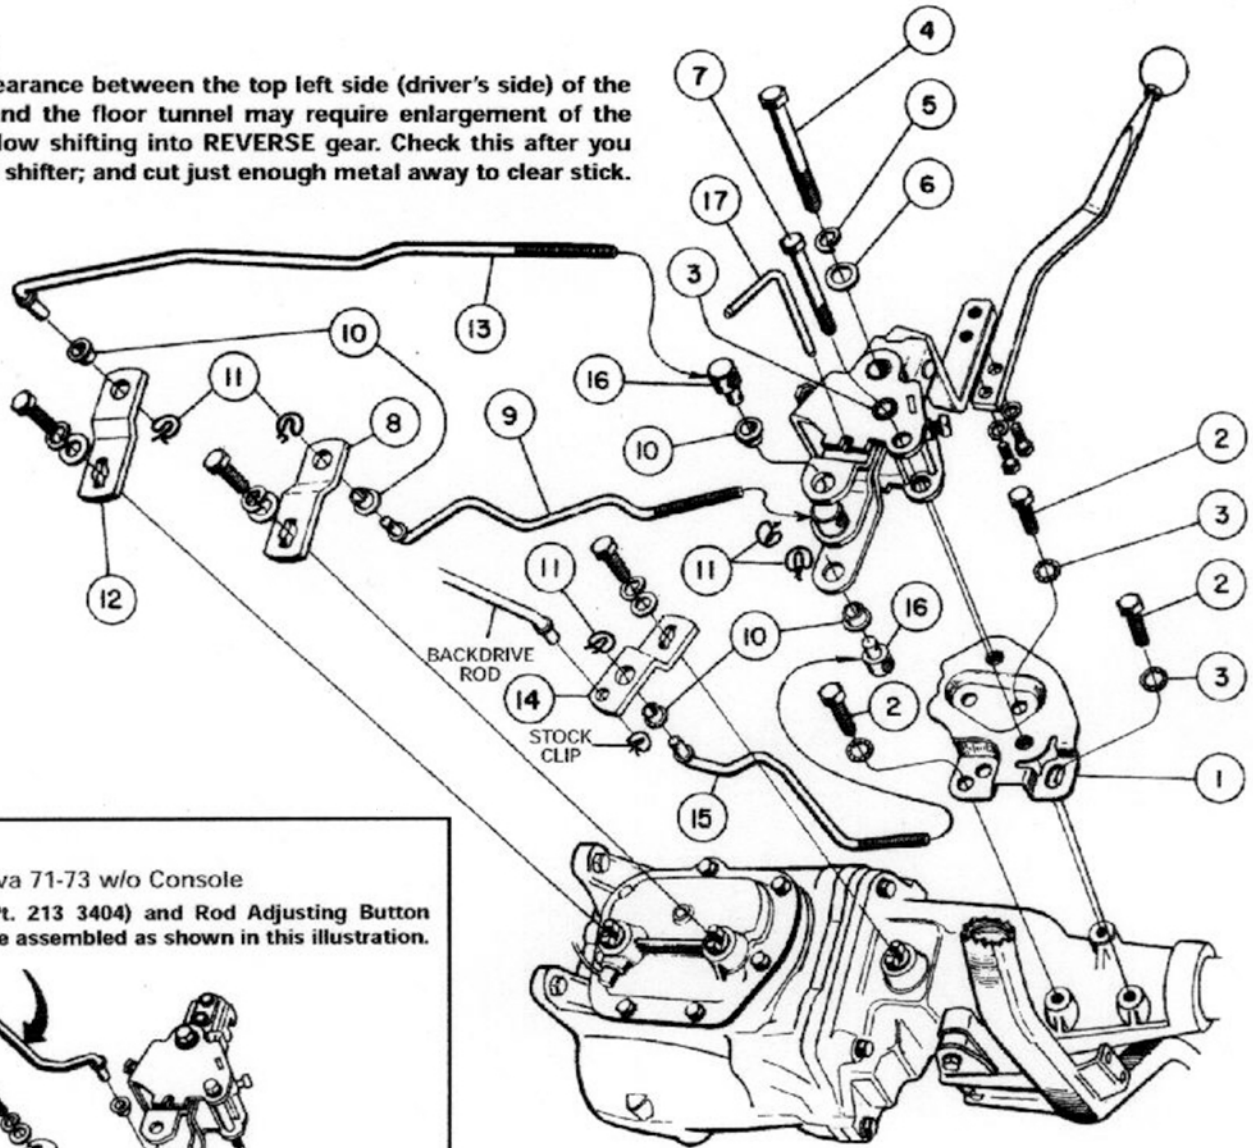


FIG. 1

Chevy II & Nova 71-73 w/o Console

Reverse Rod (Pt. 213 3404) and Rod Adjusting Button (Pt. 119 3783) are assembled as shown in this illustration.

