


1965-70 Pontiac Wood Wheel

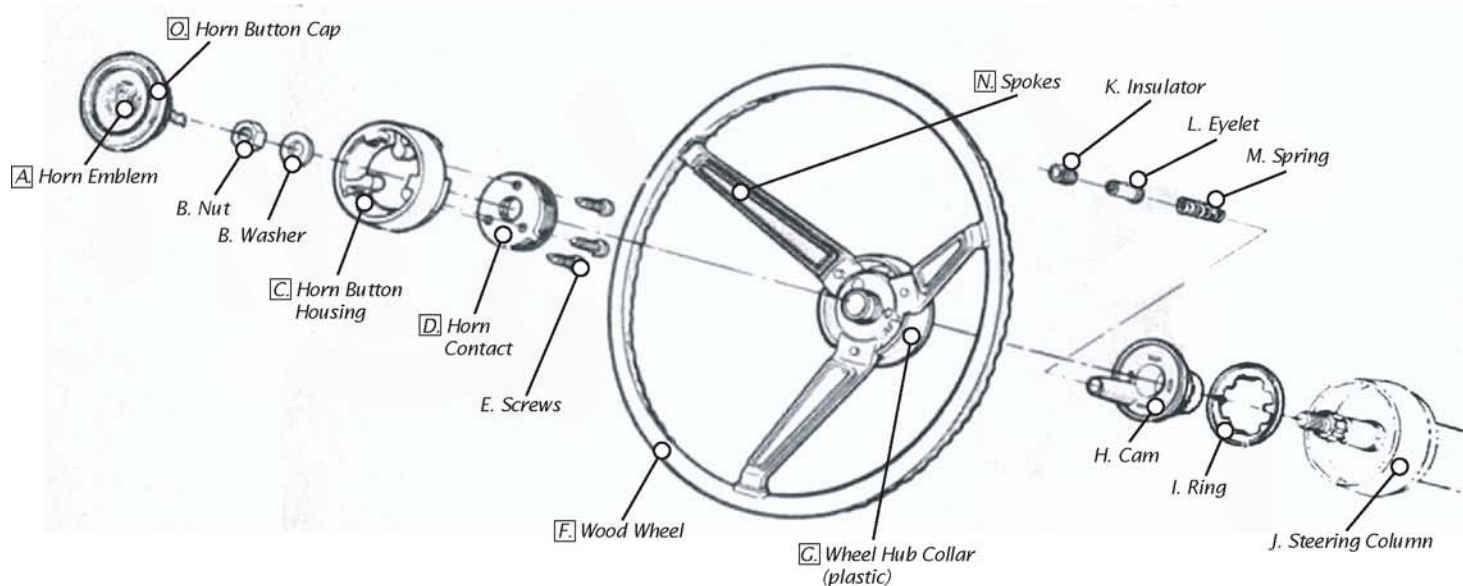

1965 Wood Wheel shown, same basic assembly for all years.

* Item letters with ☐ are parts we carry..

1965-67 Wood wheel kits include:

F. Wood Wheel
N. Spokes
G. Hub Collar
C. Horn Button Housing
A & O. Chrome Button Cap and Horn Emblem

No mounting screws are included in kits and are just not available

1968-70 Wood wheel kits include:

F. Wood Wheel
G. Hub Collar
C. Horn Button Housing
A & O. Chrome Button Cap and Horn Emblem
D. Horn Contact

Basic Installation directions:

1. Mount Wheel ☐ Hub Collar to the bottom of ☐ Wood Wheel.
2. ☐ Horn Contact screws to the bottom of the ☐ Horn Button Housing with 3 screws (not included)
3. Position steering wheel on the column in the desired position (remember the tires should be pointed the way you want them)
4. Place the ☐ Horn Button Housing with the attached Horn Contact on after the Wheel. Put the nut and Washer on and tighten to correct torque foot #.
5. Snap on ☐ Horn Button Cap with ☐ Emblem.